

Quick Start Guide

1

This document is intended to give you the minimum information needed to configure your router, and is for Windows operating systems only. Should you require more information, or information on how to configure the Mega 100WR using an alternative operating system, please view the file \manual\mega 100WR... on the CD ROM supplied with this router.


Your Mega 100WR package should contain these items. For any missing items, please contact Telkom immediately.




2

There are 3 different ways to connect you Mega 100WR to an ADSL enabled telephone line. Choose the one that suits you best In all cases, the telephone line must be connected via the surge protection in the LPU.


A) Without a telephone

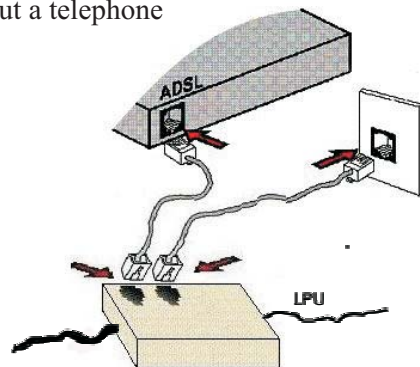


B) With a telephone using a double telephone socket

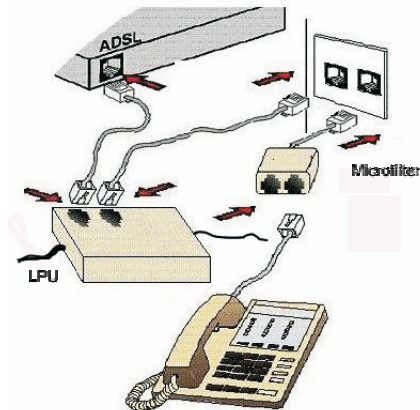

C) With a telephone using a single telephone outlet

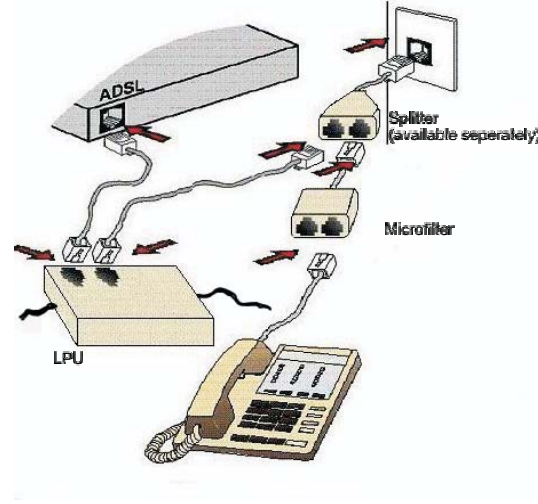


Telephones used on ADSL enabled telephone lines must ALWAYS be connected using a microfilter, even when connected to a different telephone outlet to the one that the router is connected to.

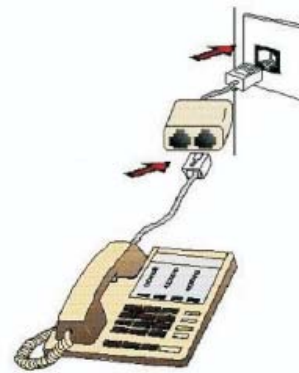

3

The Mega 100WR is powered through a LPU.

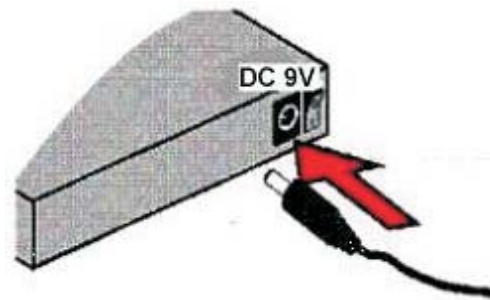


Please plug the 3 pin mains plug on the other end of the LPU into a mains outlet.



CAUTION

**Use only the supplied power adaptor (LPU) !
Use of any other adaptor may damage the router !**


Switch on your Mega 100WR.

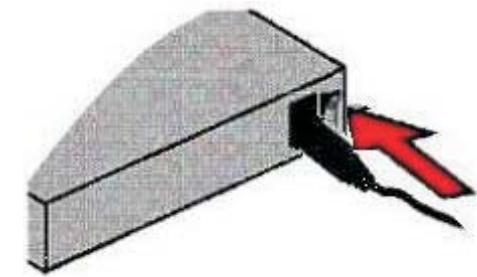

4



Insert the Utility CD that came with your Mega 100WR into your CD-ROM Drive. (If you don't see the screen show below, then you will have to access the CD-ROM and run \setup.exe) .

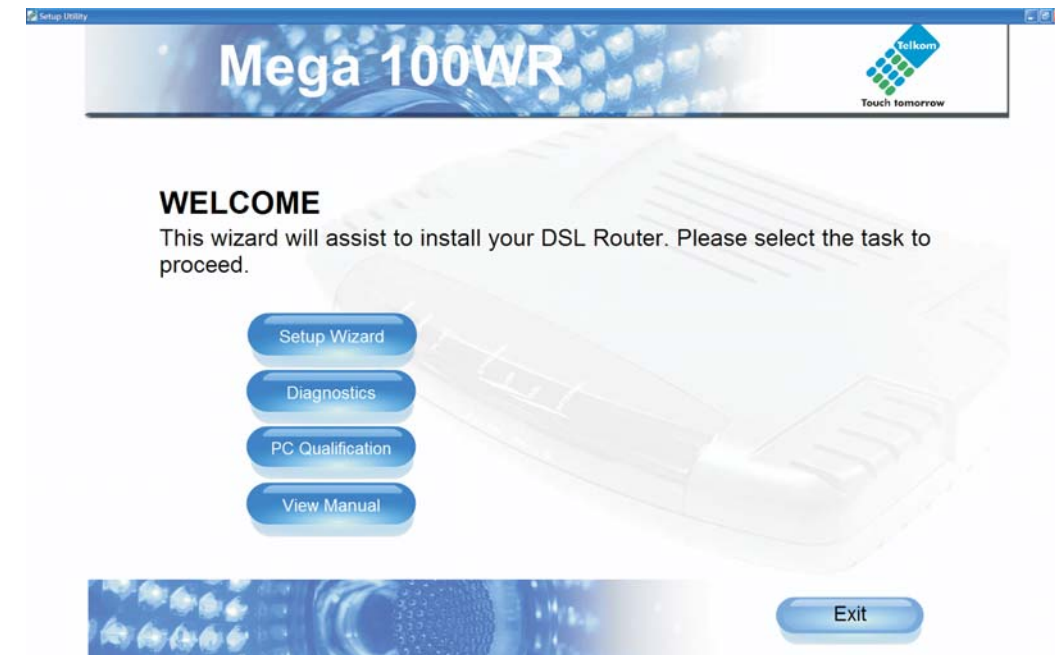

The Setup Wizard will guide you through the rest of the installation process.

Please click on **Setup Wizard**

NOTE: The Wizard will prompt you when you are required to connect the router to your computer. Follow the relevant part of the next section (on the other side of this page) when prompted


NOTE: If you are using Windows XP x64, and are connecting via USB, there is a special section in the manual or full Easy start guide (found on the CD) that you will need to read before continuing.

5

There are 3 different ways to connect your Mega 100WR to your computer. please connect using one of the following methods when prompted by the instalation utility


A)Ethernet

Connect Ethernet like this :

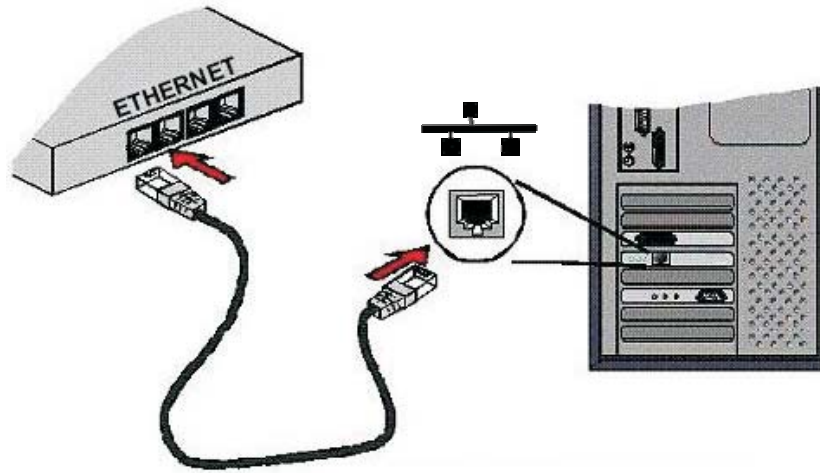

B)USB

Connect USB like this :

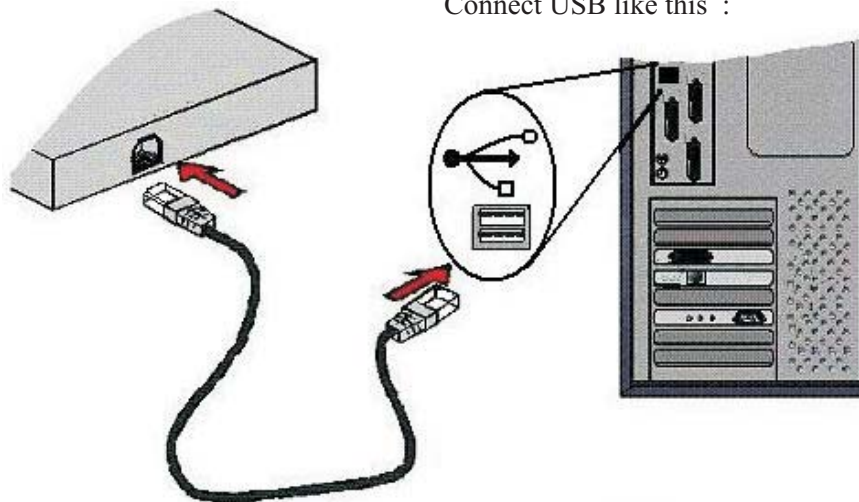


C)Wi-Fi

We don't recommend doing the initial setup using Wi-Fi . Please use one of the other connection methods first. Once your Mega 100WR is set up, you can read the manual to learn how to connect Wi-Fi

6

This is the external layout of the router

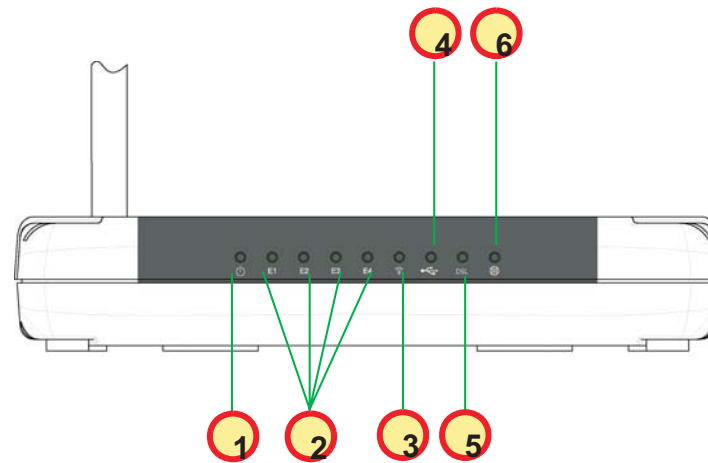

LED Name	Status & Meaning
1. Power	Lights up when power is supplied to the ADSL Router.
2. E1 - E4 (Ethernet)	Lights up when the Ethernet cable is properly connected from your ADSL Router to the Ethernet Card. Flickers when the ADSL is transmitting/receiving data.
3. Wireless	Flickers when the Wireless LAN is operational.
4. USB	Lights up when the USB cable is properly connected from your ADSL Router to the USB slot. Light is off when the USB cable is not correctly connected.
5. DSL	Light is off when no Telephone jack (RJ-11) is connected. Flickers when the ADSL Router is trying to establish a connection with the ADSL Service Provider . Steady Green LED. Lights up when the ADSL connection is established.
6. Internet	Green LED lights up when the PPP connection is established. Light is off when there is no PPP connection.

7

If you are having difficulties in getting your system configured, please refer to the Easy start guide which has been supplied on the Utility CD. This Guide contains additional information that may be of assistance to you if you are having problems with your configuration. There is also further information in the Manual that is also been included on the Utility CD.

If you are experiencing difficulties in getting connected, you are welcome to contact one of the following help desks who will be glad to help :

For problems relating to your ADSL account details, telephone line problems etc. please contact :


Telkom ADSL Help Desk
0800 375 375
24 hours a day

For problems with configuring your router (when there is no problem with your telephone/ADSL line and ISP account details)

2C Telecoms Help Desk
0860 224 357
Monday - Thursday 8:00 - 16:45
Friday 8:00 - 16:00

Please retain all packaging that this product was supplied with. The guarantee will not be honoured if this product is not returned in its original packaging.

For Information on other routers and telephones available from Telkom visit www.telkomphones.co.za

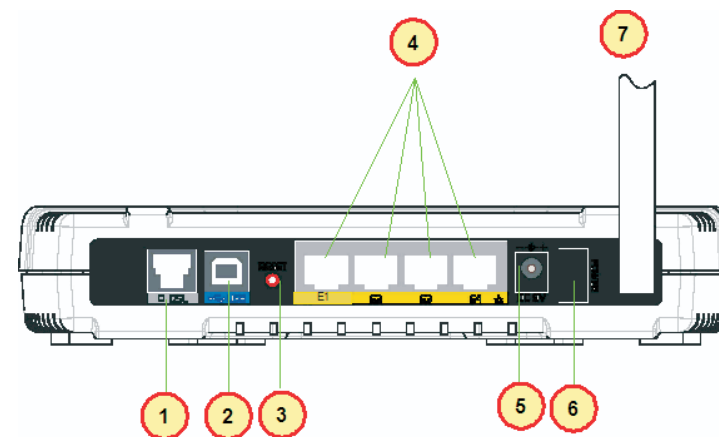

Label	Description
1. DSL	Connect the telephone jack (RJ-11) to your Telephone Wall Socket (DSL line) via your LPU.
2. USB	Connect the USB jack to your PC's USB slot.
3. RESET	To reset the ADSL Router, simply press the reset button for about 10 seconds (all customised settings that you have saved will be lost!).
4. E1-E4 (ETHERNET)	10/100 Base-T Auto-MDI/MDIX Ethernet jack (RJ-45) to connect to your PC's Ethernet Network card or Ethernet Hub / Switch.
5. DC 9V	To connect to the Power Adapter that comes with your package.
6. POWER SWITCH	Push downwards to switch ON and lift upwards to switch OFF.
7. RF Antenna	2.4Ghz Wireless Antenna.